BANDAI

TAMAGOTCHI Ocean™

INSTRUCTIONS

Ages 8
and up.

The Tamagotchi Ocean is approximately 3,720,000 kilometers deep. It is on the world of Tamagotchi. It seems that the Tamagotchi Ocean does not contain salt water but juice and Tamagotchi soda water. The Tamagotchi Ocean floor is like the planet and has beautiful scenery. They have great surfing in the Tamagotchi Ocean. The main staple is pickles. I have no idea why! In the Tamagotchi Ocean, there are Bugs Island, Summer Winter Island and Lazy Island.

PREPARATION

1. Before starting your Tamagotchi Ocean:

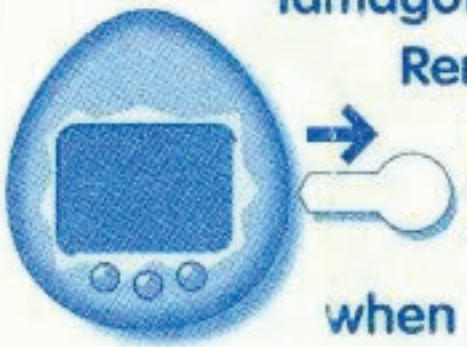

Remove the insulated tab from the side of the body.

The toy will beep when it is started.

RESET SWITCH

With a pointed object, press the button in the back, and the toy will reset. You will hear a beep to confirm your action.

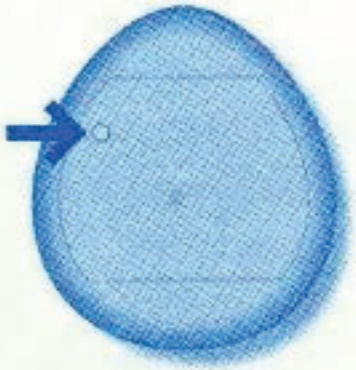

NOTE: Do not apply too much pressure on the reset button.

SETTING THE TIMER

Press the B button to set the timer.

By pressing the A button, the hours will increase.

By pressing the B button, the minutes will increase.

Select with C button.

Return to the main screen by pressing the B button again.

After about 5 minutes, your Tamagotchi Ocean will hatch!!

1) If the timer has not been set, your Tamagotchi Ocean will not hatch!!
2) While waiting for your

Tamagotchi Ocean to hatch, only the timer and reset functions are available.

AFTER TAMAGOTCHI OCEAN HATCHES

When Tamagotchi Ocean starts beeping, please check the icons to see if it needs anything.
Press buttons . . .

"A" to scroll through the icons, "B" to select, "C" to cancel an icon!

When you need some help understanding what Tamagotchi Ocean needs, check the Health Meter icon.

(To see how to take care of your Tamagotchi Ocean, see "Health Meter" section.)

CARING FOR YOUR TAMAGOTCHI OCEAN

(Explanation of the icons)

When your Tamagotchi Ocean returns home in its submarine, you will not be able to select any of the icons.

If you would like to cancel the icon that you have selected, press the C button. If you are not back to the main screen, press the C button again.

HEALTH METER

Scroll through the icons with Button A and select the Health Meter icon with Button B to see the current status of your Tamagotchi Ocean. Press the A or B buttons to scroll through "Age & Weight", "Water Quality", "Hunger", "Happy" and "Discipline". Press the C button to return to the main screen.

AGE & WEIGHT: You will see how old it is and how much your Tamagotchi Ocean weighs.

WATER QUALITY: You will be able to see how dirty the water is. The more contaminated the water is, the more skulls will be black. When all 4 skulls are black, the screen will become black also. When this occurs, select the Bathroom icon to clear the screen.

HUNGER/HAPPY: There are 4 hearts. When Tamagotchi Ocean is born, it starts from hungry and unhappy. The more full and happy your Tamagotchi Ocean is, the more hearts will be filled.

DISCIPLINE: It will start from zero. The better disciplined your Tamagotchi Ocean is, the fuller the meter will be.

FOOD

Scroll through the icons with Button A and select the Food icon by pressing B. Then scroll through the food selection, "Meal" or "Snack", by pressing A and select the food by pressing Button B.

GAME

Play a game with your Tamagotchi Ocean by scrolling through the icons with Button A, and selecting the Game icon by pressing B. The Treasure Chest Guessing Game begins!! Press either the A or B button to select the right or left treasure chest. When the treasure chest opens, if the treasure is inside, you win!! If you find the treasure 3 out of 5 times, you will gain happy points. Press C to cancel the game, or the game will continue on indefinitely. If an octopus appears during the game, the water will become contaminated and the game is over!!

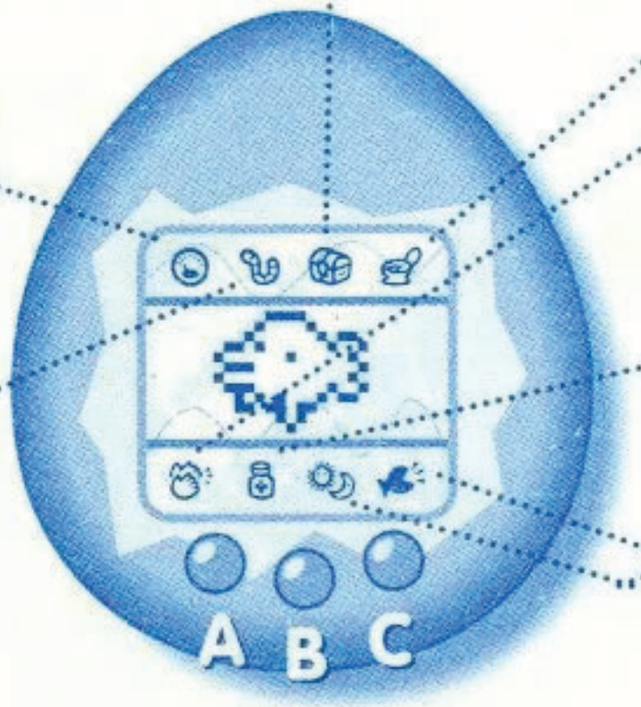

GAME

Play a game with your Tamagotchi Ocean by scrolling through the icons with Button A, and selecting the Game icon by pressing B. The Treasure Chest Guessing Game begins!! Press either the A or B button to select the right or left treasure chest. When the treasure chest opens, if the treasure is inside, you win!! If you find the treasure 3 out of 5 times, you will gain happy points. Press C to cancel the game, or the game will continue on indefinitely. If an octopus appears during the game, the water will become contaminated and the game is over!!

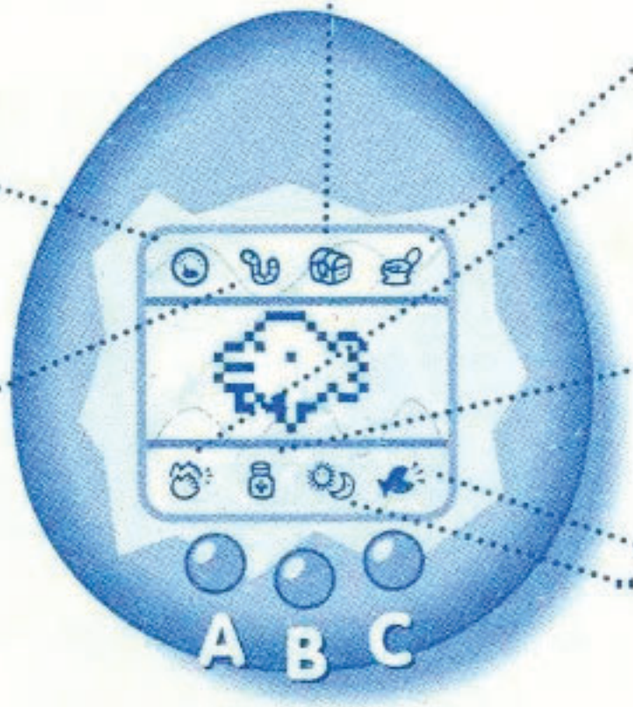

BATHROOM

If your Tamagotchi Ocean makes a mess, scroll through the icons by pressing A to the bathroom icon and press B. You can also use this icon to clean up the water when it becomes contaminated.

CALLING BOX (To ward off the enemies!?)

You can call your Tamagotchi Ocean by scrolling through the icons with the A button and pressing B to select the calling box icon. If Tamagotchi Ocean is calling for your attention for no reason, also use this icon to discipline it. (See the following for when Tamagotchi Ocean needs discipline.) When you discipline it, it will beep at you to apologize.

Discipline Tamagotchi Ocean if it is ...

- Unhappy but will not play a game with you.
- Hungry but will not eat a meal.
- Sick and will not take the medicine.
- Wanting attention when it is full and happy.

MEDICINE

If you were not successful in warding off the enemies, your Tamagotchi Ocean will be wrapped up in bandages. Heal its wounds by scrolling through the icons by pressing A and selecting the Medicine icon by pressing B until the bandages are all gone.

LIGHT

Scroll through the icons by pressing button A and go to the Light icon and press B. Press A again to scroll through the selection of turning on or off the lights. Make your selection by pressing B.

When you see that your Tamagotchi Ocean is asleep, make sure that you turn off the lights. (During Tamagotchi Ocean's sleep, you will only be able to check the

ATTENTION

When your Tamagotchi Ocean wants attention, make sure that you give it attention while the attention icon is highlighted.

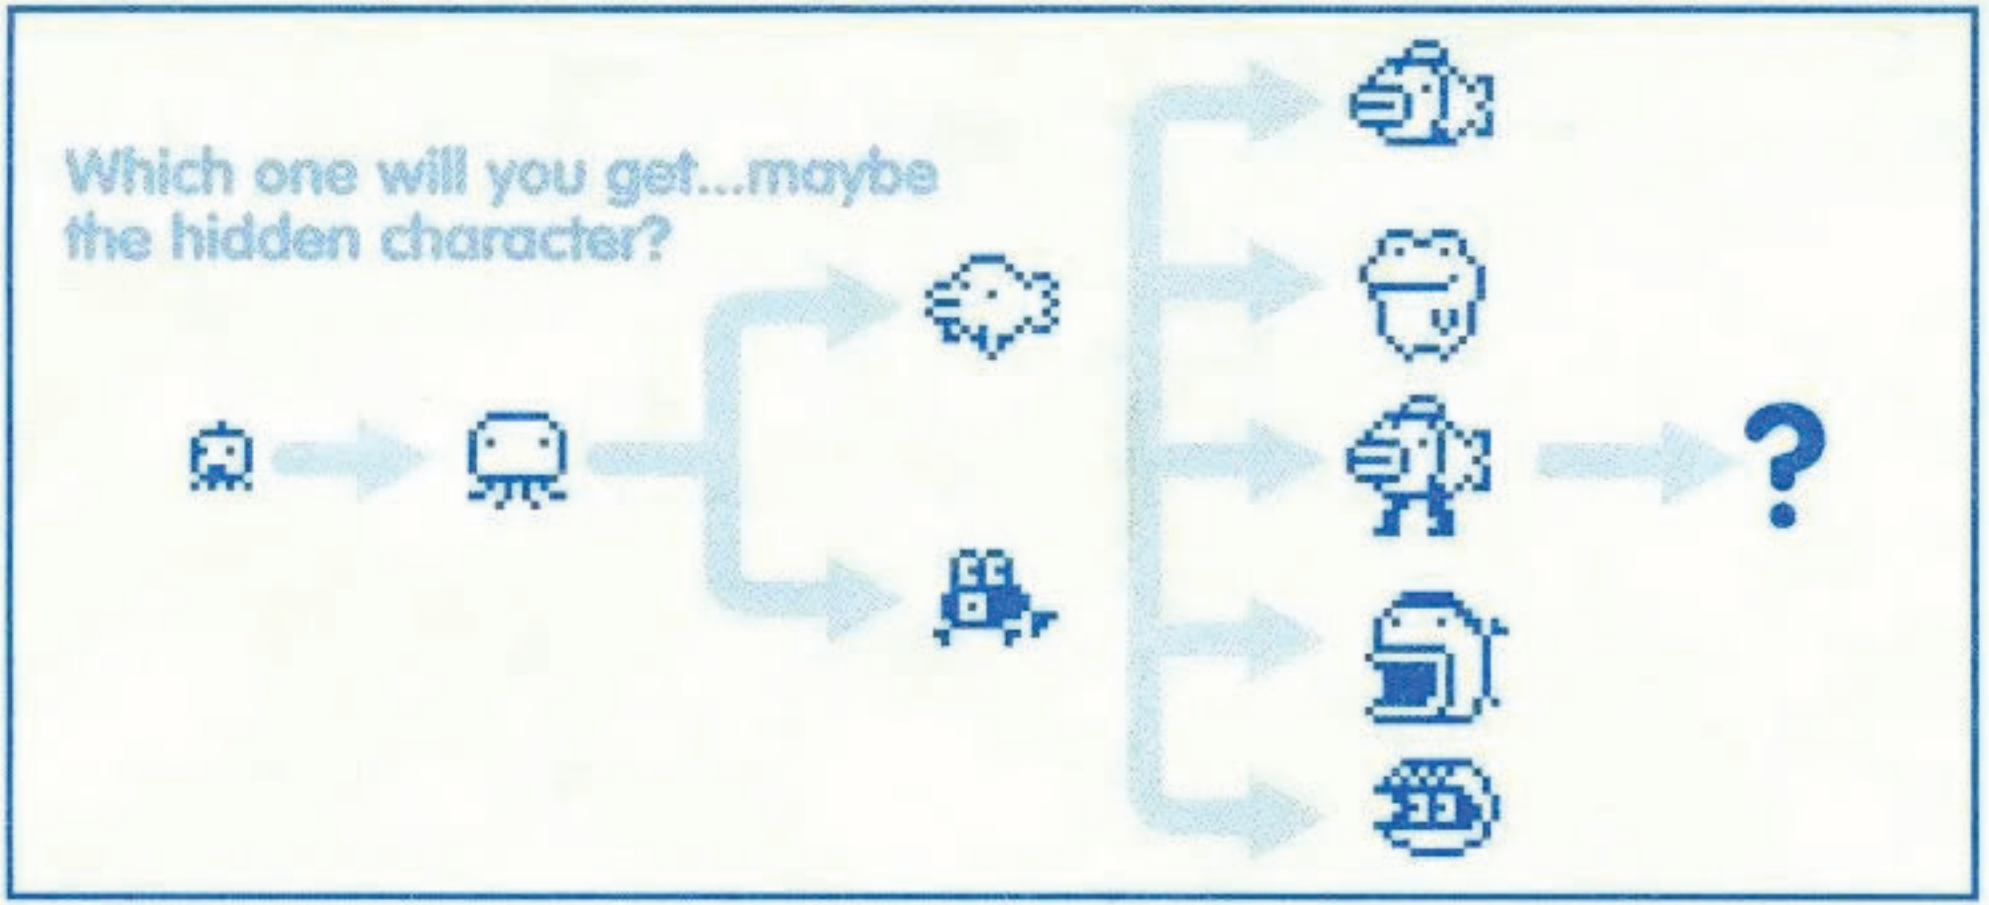

BEWARE!!

When Tamagotchi Ocean is taking a nap during the afternoon, it may call out to you:

If you look closely, you will see an enemy at the edge of the screen. Do not panic! You need to wake Tamagotchi Ocean up by following the instructions that follow.

1) Scroll through the icons with button A and select the calling box with button B.

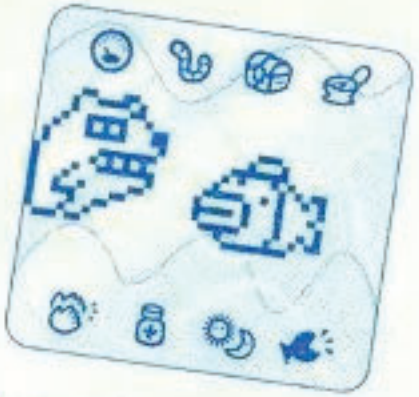

2) Tap the screen gently and hopefully you will be able to wake it up.

(There will be times when it will wake up right after you call it and before you tap the screen.)

NOTE: Do not tap the screen too hard.

If you do not make it in time, and Tamagotchi Ocean gets hurt by the enemy, make sure you give it medication. To give it medication, scroll through with button A and select the Medicine icon with button B.

WHEN TAMAGOTCHI OCEAN SWIMS AWAY IN ITS SUBMARINE

If you see a submarine, that means your Tamagotchi Ocean returned to its home. Press C to see how old it was when it left. Press C again to return to the main screen.

When you would like to hatch a new Tamagotchi Ocean, press the A and C button simultaneously. A new egg will appear on the screen and it will hatch in 5 minutes.

BATTERIES

Replace the batteries if the screen becomes dim or weak or appears on the screen.

1) Loosen and remove the two battery cover screws.
2) Remove the battery cover and the batteries.
3) Insert 2 new LR44 batteries. Make sure to match the positive (+) and negative (-) signs properly.

NOTE: Be sure to use both new batteries, do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Dispose of used batteries properly.

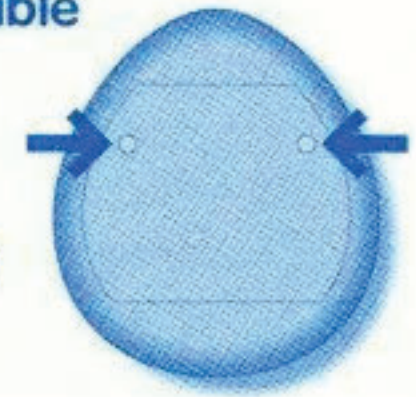

4) Replace the battery cover and tighten the screws into place.
5) Press the reset switch on the back of the toy with a pointed object.
6) Reset the Timer and a new Tamagotchi Ocean will hatch in about 5 minutes!

CAUTION: Battery may be harmful if swallowed.

WHEN TO RESET

(To reset, see "Setting The Timer" section.)

- When you first start your Tamagotchi Ocean.
- When you change the batteries.
- When your Tamagotchi Ocean is not working properly.
- When none of the functions are working.
- When the screen looks strange.
- When you would like to raise a

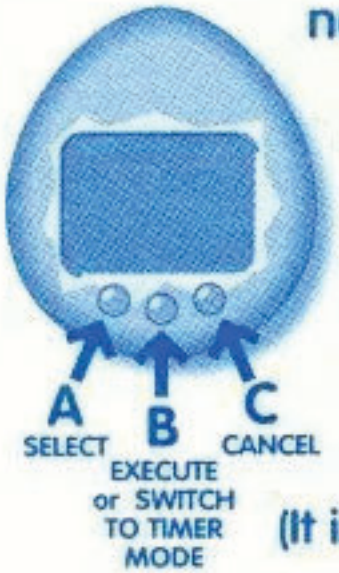

new Tamagotchi Ocean.

REMEMBER: Do not press the reset button too hard with a sharp object.

Do not press the reset button other than times indicated above.

(It is extremely sensitive.)

SOUND

When you are at the main screen, press the A and C buttons simultaneously, then you will hear a beep to confirm the sound is off. Press the same buttons again to turn the sound on.

TIMER

TO SEE THE TIMER

When the main screen is visible, and there are no icons lit, press the B button to bring up the timer screen. Press B again to return to the main screen.

WHEN YOU NEED TO RESET THE TIMER

Press the B button to show the timer. Then press the A and C buttons at the same time to see the timer reset screen. Please see "Setting the Timer" section to restart the timer.

The timer can't be reset if your Tamagotchi Ocean has gone back home.

PAUSE

When you need to be away from your Tamagotchi Ocean for an extended period of time, it is possible to suspend the life cycle.

1) Press Button "B" to bring up the timer.

2) Press Buttons "A" and "C" at the same time. The word "SET" will appear. When Tamagotchi Ocean is on the "SET" function, the life cycle is paused.

3) Reset the timer to the correct time to resume play.

4) Press Button "C" to return to the normal life cycle.

TM & © 1997 Bandai Co., Ltd. TAMAGOTCHI, TAMAGOTCHI OCEAN and all related logos, names and likenesses herein are the exclusive property of Bandai Co., Ltd. and Bandai America Incorporated. All rights reserved. Visit Tamagotchi Ocean and Tamagotchi on the World Wide Web at: http://www.bandai.com or http://www.toynetwork.com